


1. .
2. « » 6.18.11 1.05 1.2.

 
 
« » :
<https://knowledge-base.rr-electro.com/pages/viewpage.action?pagelId=20938788>

3. «01.». «» «».
4. , .4 16.01.2025 D.4 05.02.2025 .

C.4 D.4 :
<https://knowledge-base.rr-electro.com/pages/viewpage.action?pagelId=20938788>

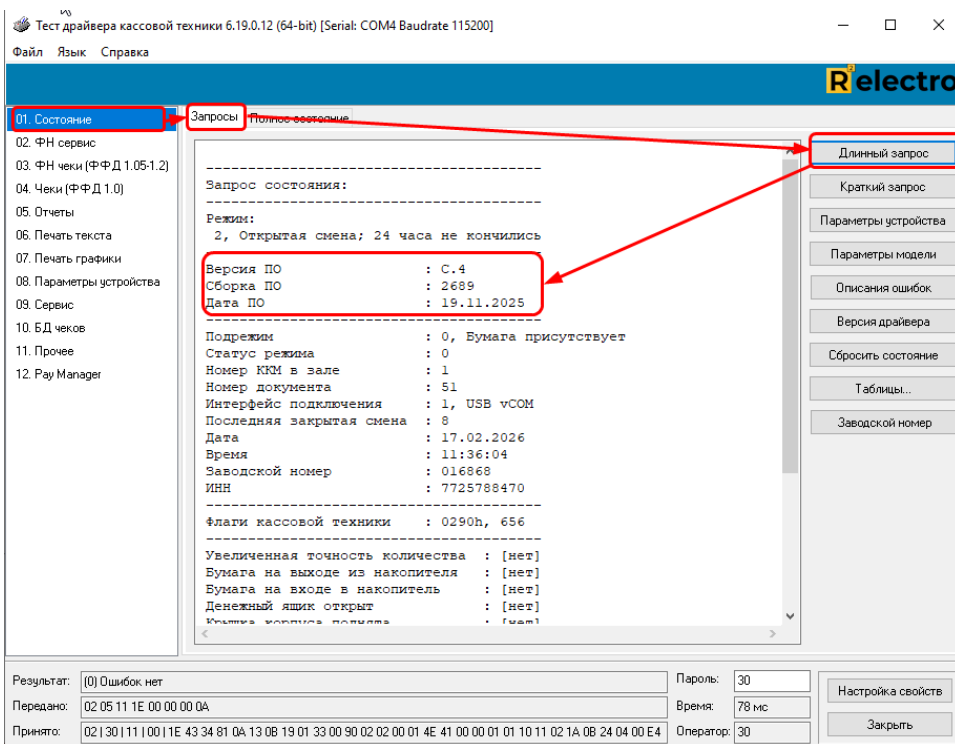

5. «09.». «».
6. «» «» *.slf, . «» .
7. « »: « (HEX)» « (HEX)» :



The screenshot shows the main window of the "Releco" application. At the top, there's a title bar indicating it's testing a cash register driver version 6.19.0.12 (64-bit) with serial COM4 and baudrate 115200. Below the title bar is a menu bar with "Файл", "Язык", and "Справка". The left sidebar contains a list of functions from "01. Состояние" to "12. Pay Manager", with "09. Сервис" currently selected. The main panel has tabs for different services like "НИ", "Лицензии ККТ", etc., with "Лицензии ККТ" being active. This tab includes fields for license numbers, dates, and buttons for saving or reading licenses. A red rectangle highlights two buttons at the bottom: "Прочитать функциональные лицензии" and "Записать функциональные лицензии". An arrow points from the first button down to a large text box containing detailed licensing information such as "лицензия v2", internal testing status, package number, date, time, and operator name. At the very bottom, a status bar displays communication logs under "Результат:", "Передано:", and "Получено:".

